

OPERATING AND INSTALLATION MANUAL

INDIRECT WATER TANKS

OKC 400 NTRR/HP/SOL
OKC 500 NTRR/HP/SOL



Družstevní závody Dražice-strojírna s.r.o.
Dražice 69, 294 71 Benátky nad Jizerou
tel.: +420 / 326 370 911
fax: +420 / 326 370 980
e-mail: export@dzd.cz

 **DRAŽICE**
MEMBER OF THE NIBE GROUP

OBSAH

1	PRODUCT TECHNICAL SPECIFICATION	4
1.1	FUNCTION DESCRIPTION	4
1.2	DESIGN AND BASIC DIMENSIONS OF TANK.....	4
1.2.1	PRODUCT DESCRIPTION.....	4
1.2.2	TECHNICAL DATA	5
1.2.3	PRESSURE LOSSES	8
2	OPERATION AND FITTING INSTRUCTIONS.....	8
2.1	COMMISSIONING THE RESERVOIR	8
2.2	CONNECTING THE RESERVOIR TO HOT WATER DISTRIBUTION	9
2.3	PLUMBING FIXTURE.....	10
2.4	CONNECTION OF TANK TO HOT WATER DISTRIBUTION SYSTEM.....	11
2.5	TANK CLEANING AND ANODE ROD EXCHANGE	11
2.6	SPARE PARTS.....	12
3	IMPORTANT NOTICES	13
3.1	IMPORTANT NOTICES	13
3.2	INSTALLATION REGULATIONS.....	13
3.3	DISPOSAL OF PACKAGING MATERIAL AND NON-FUNCTIONING PRODUCT.....	13

CAREFULLY READ THIS MANUAL BEFORE INSTALLING THE WATER HEATER!

Dear Customer,

The Works Cooperative of Dražice - Machine Plant, Ltd., would like to thank you for your decision to use a product of our brand. With this guide, we will introduce you to the use, construction, maintenance and other information on electrical water heaters.



The product is not intended to be controlled by

- a) people (including children) with reduced physical, sensual or mental capacities, or
- b) people with insufficient knowledge and experiences unless supervised by responsible person, or unless properly instructed by such responsible person.

The manufacturer reserves the right for engineering modification of the product. The product is designed for permanent contact with drinkable water.

It is recommended to use the product in indoor environment with air temperatures from +2°C to +45°C and a relative humidity up to 80%.

Product's reliability and safety is proven by tests implemented by the Engineering Test Institute in Brno.

Made in the Czech Republic.

Meaning of pictograms used in the Manual



Important information for heater users.



Abiding by the recommendations of the manufacturer serves to ensure trouble-free operation and the long service life of the product.



Caution!
Important notice to be observed.

1 PRODUCT TECHNICAL SPECIFICATION

1.1 FUNCTION DESCRIPTION

Indirect stationary tank OKC 400, 500 NTRR/HP/SOL is designed for water heating in conjunction with a heat pump. Reheat can be carried out by the electric heater TJ 6 / 4".

1.2 DESIGN AND BASIC DIMENSIONS OF TANK

1.2.1 PRODUCT DESCRIPTION

The tank receptacle is welded of steel plate and, as a unit, enamelled to resist hot water. For additional corrosion protection, **2 magnesium anodes** are attached in the vessel in the upper part, adjusting the electric potential inside of the vessel interior, decreasing corrosion. Inside the vessel there are two welded spiral heat exchangers made of steel pipe with enamelled outer coating, and connections of hot and cold water, circulation and 3 brass reservoirs.



The upper tubular heat exchanger is designed for the heating circuit, lower tubular heat exchangers is designed for solar system.



The tank is placed on the ground, next to the heating water source, or in its vicinity. All connecting distributions must be properly insulated from heat.

On the side of the reservoir there is a cleaning and inspection aperture ending with a flange of 110 mm diameter, the pitch of eight M8 bolts is 150 mm. The reservoir is equipped with a G 1 ½ " aperture for screwing an additional heater. This option is used, if the reservoir is connected into the system with a heat pump, for water reheating at the top of the reservoir to the desired temperature. The tank is insulated with polyurethane foam of 50 mm thickness, polyurethane foam does not contain freons. The tank shell consists of plastic container, the connecting parts are metal coated. The entire tank stands on three rectification screws with a possibility of levelling floor unevenness within the range of 10 mm. Insulation of the receptacle is 50 or 60 mm Freon - free polyurethane foam.

1.2.2 TECHNICAL DATA

TYPE		OKC 400 NTRR/HP/SOL	OKC 500 NTRR/HP/SOL
VOLUME	L	352	469
HEIGHT	mm	1644	1914
DIAMETER	mm	700	700
MAXIMUM WEIGHT WITHOUT WATER	kg	183	233
MAXIMUM OPERATING OVERPRESSURE IN THE VESSEL	bar		10
MAXIMUM OPERATING OVERPRESSURE IN THE EXCHANGER*	bar		10
MAXIMUM HEATING WATER TEMPERATURE	°C		110
MAXIMUM OPERATING TEMPERATURE IN THE VESSEL	°C		80
HEATING SURFACE OF UPPER/ LOWER EXCHANGER	m ²	1,4 / 3,1	2 / 4,8
VOLUME OF UPPER/ LOWER EXCHANGER	L	9 / 19,3	12,3 / 29,7
TIME OF HEATING BY EXCHANGER FROM 10°C TO 60°C (upper/ lower)	min	22 / 32	27 / 26
ENERGY EFFICIENCY CLASS		C	C
STATIC LOSS	W	90	105

Table 1

OKC 400 NTRR/HP/SOL

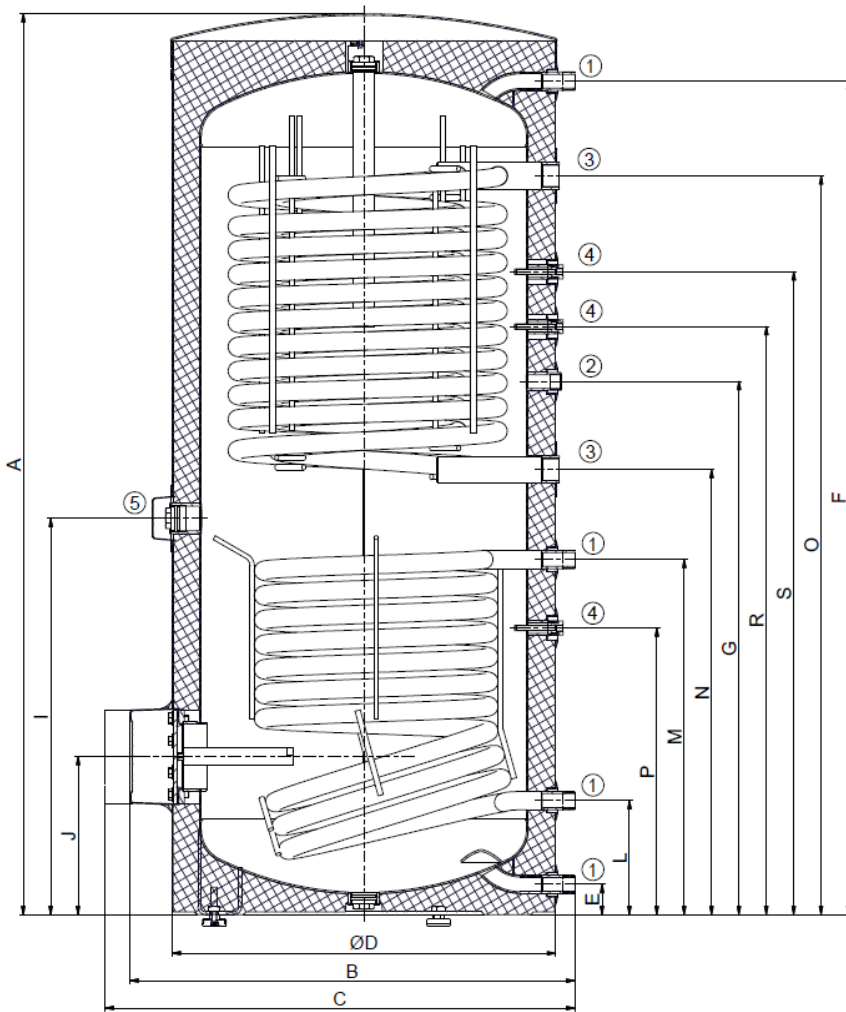


Figure 1

①	1" outer
②	3/4" inner
③	5/4" inner
④	1/2" inner
⑤	6/4" inner

OKC 400 NTRR/HP/SOL	
A	1644
B	812
C	857
D	700
E	55
F	1521
G	973
I	723
J	288
L	208
M	648
N	812
O	1348
P	355
R	1073
S	1173

Table 2

OKC 500 NTRR/HP/SOL

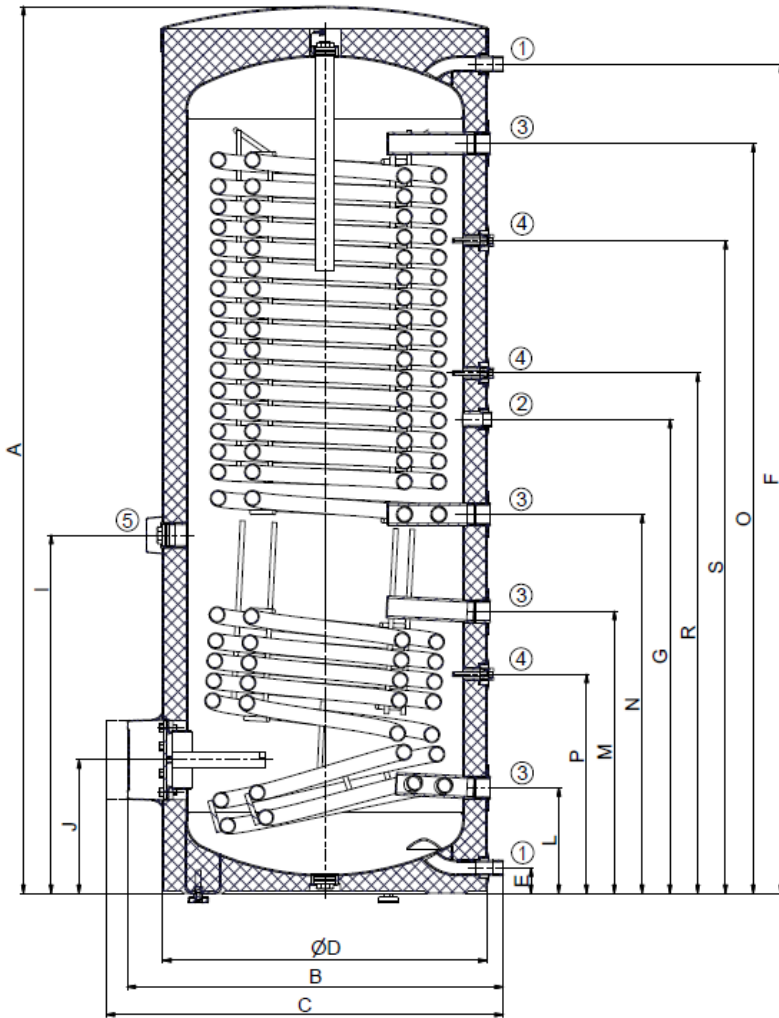


Figure 2

①	1" outer
②	3/4" inner
③	5/4" inner
④	1/2" inner
⑤	6/4" inner

OKC 500 NTRR/HP/SOL

A	1914
B	812
C	857
D	700
E	55
F	1790
G	1023
I	773
J	288
L	228
M	609
N	818
O	1618
P	473
R	1123
S	1409

Table 3

1.2.3 PRESSURE LOSSES

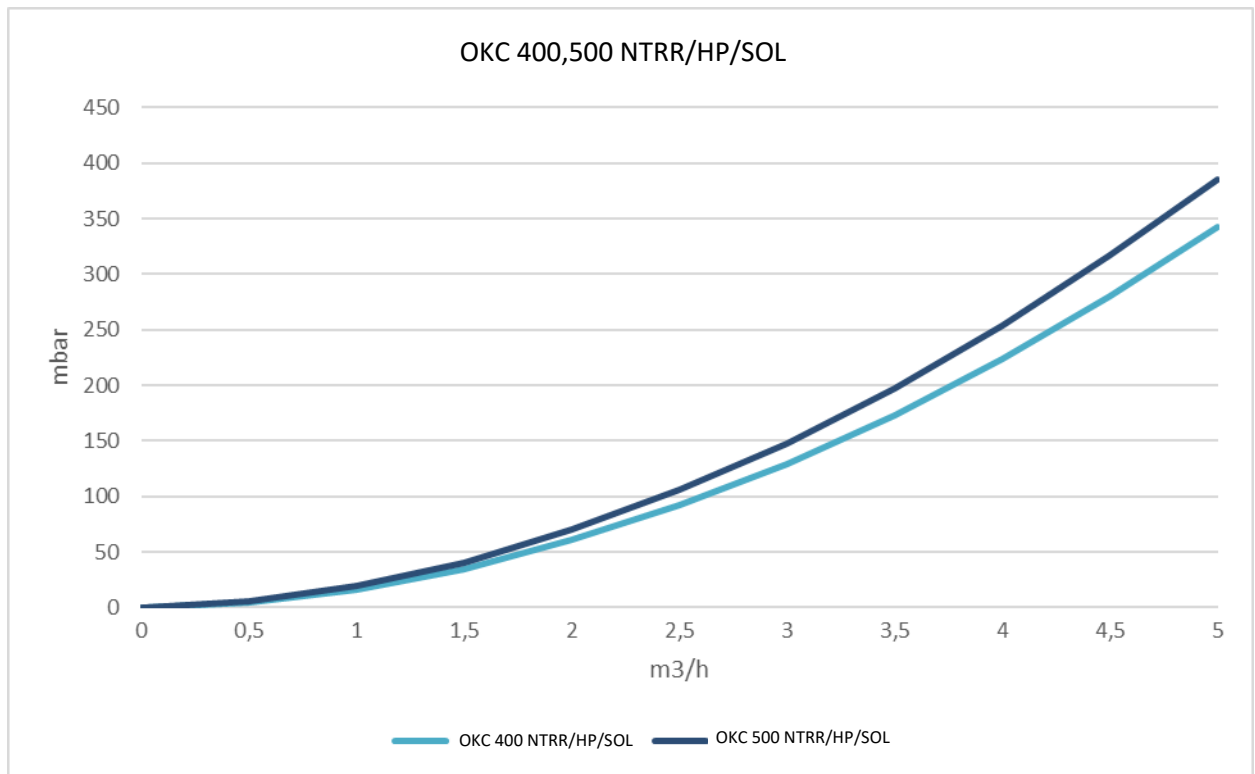


Figure 3

2 OPERATION AND FITTING INSTRUCTIONS

2.1 COMMISSIONING THE RESERVOIR

Once the tank is connected to water supply system and power supply, and the safety valve tested (accordingly with the manual attached to the valve), the tank can be put in operation. Before opening the power supply, the tank must be filled with water. The process of first heating must be executed by licensed professional who has to check it. Both the hot water outlet pipe and safety armature parts may be hot.

Procedure:

- Check the plumbing and electrical installation, including the connection to hot-water heating system. Check proper placement of operating and safety thermostat sensors. The sensors must be inserted all the way in; first the operating and then the safety thermostat.
- open the hot water valve on the combination faucet;
- Open the cold water inlet valve to the tank
- when the water starts flowing through the hot water valve, the filling of the tank is finished and the valve needs to be closed
- Should a leak (of the flange lid) occur, we recommend tightening the screws of the flange lid.
- When heating the water with thermal energy from a hot water heating system, turn off the electricity and open the valves at the inlet and outlet of heating water or bleed the exchanger. Once the operation restarts, keep flushing the tank until the cloud disappears.
- Make sure to fill in properly the warranty certificate.

2.2 CONNECTING THE RESERVOIR TO HOT WATER DISTRIBUTION

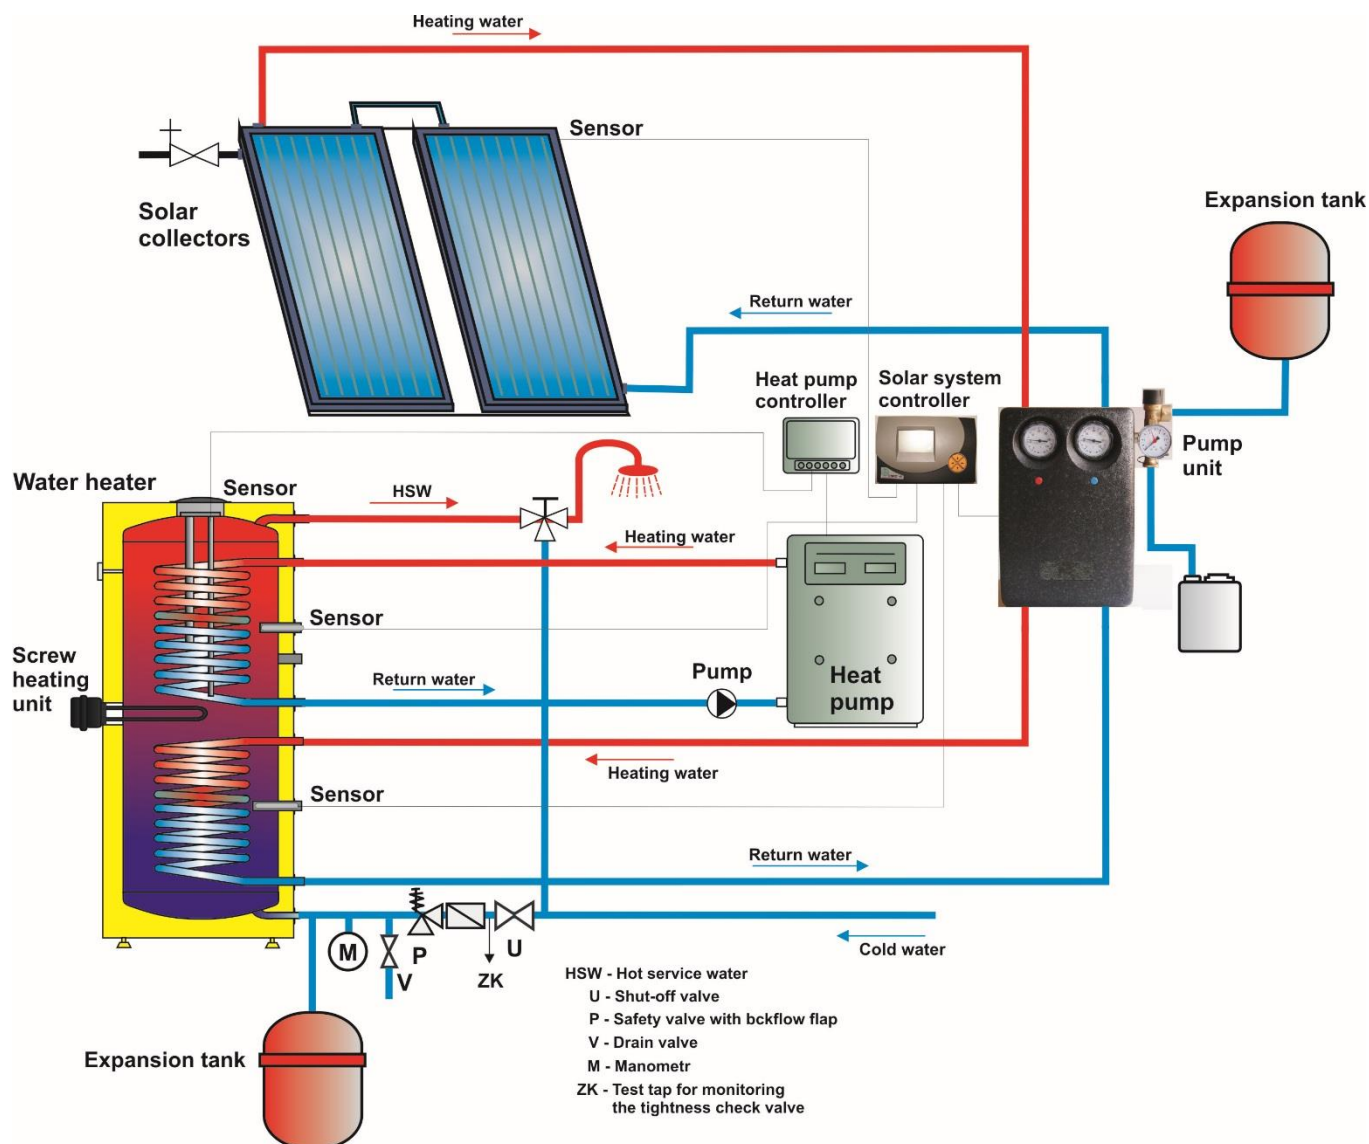


Figure 4

Heater with volume exceeding 200 liters at the outlet hot water piping provide combined temperature and pressure safety fittings according to ČSN EN 1490, or the temperature safety fittings fitted with water temperature sensor placed in the heater or other safety valves DN 20, and the opening overpressure compliant with the maximum operating overpressure of the heater vessel. The safety valve does not replace the safety valve on the cold water inlet. No closing, return armature, and filter may be mounted between the heater and the safety valve.



T fixtures with discharge valve for potential drain of water from the tank have to be mounted on the cold water inlet of the tank.



Every independently closing heater must include a shutoff, test cock, or a plug for the inspection of the backflow fitting, backflow fitting, and safety valve on the cold water supply. Heater above 200l litres is fitted with pressure gauge. It must be provided with a test valve, back valve, safety valve and manometer on the hot water inlet.

2.3 PLUMBING FIXTURE



Power water connects to pipes with 3/4" thread in the bottom part of the reservoir. Blue - cold water supply, red – hot water outlet. For potential disconnection of the tank, utility water inlets and outlets must be provided with Js 3/4" screw coupling. The safety valve is mounted on the cold water inlet identified with a blue ring.



Every hot utility water pressure tank shall be equipped with membrane spring loaded with safety valve. Nominal clearance of safety valves is defined by standard. Tanks are not equipped with safety valve. Safety valve shall be easily accessible, fitted as close as possible to the tank. The inlet pipes must have at least the same clearance as the safety valve. Safety valve is placed high enough to secure dripping water drain by gravity. We recommend mounting the safety valve onto a branch pipe. Easier exchange without the necessity of draining water from the tank. Safety valves with fixed pressure settings from the manufacturer are used for the assembly. The starting pressure of the safety valve must be identical to the maximum allowed pressure of the tank, and at least 20 % higher than the maximum pressure in the water main (Table 4). If the water main pressure exceeds such value, a reduction valve must be added to the system. No closing armature may be mounted between the tank and the safety valve. During assembly, follow the guide provided by the safety equipment manufacturer.



It is necessary to check the safety valve each time before putting it into operation. It is checked by manual moving of the membrane from the seat, turning the make-and-break device button always in the direction of the arrow. After being turned, the button must click back into a notch. Proper function of the make-and-break device results in water draining through the safety valve outlet pipe. In regular operation, such a check needs to be carried out at least once a month, and after each shutdown of the tank longer than 5 days. Water may be dripping off the drain pipe of the safety valve; the pipe must be open into the air, pointed down; environment temperatures must not drop below zero. When draining the tank, use the recommended drain valve. First of all, close water inlet in the tank.

Find necessary pressure values in the below Table 4. For proper safety valve operation, a backflow valve shall be mounted on the inlet pipes, preventing spontaneous heater draining of the tank and hot water penetration back into the water main. We recommend that the hot water distribution from the tank was as short as possible to minimise heat losses. At least one demountable joint must be mounted between the tank and every supply pipe. Adequate piping and fittings with sufficiently dimensioned maximum temperature and pressure values must be used.

SAFETY VALVE START-UP PRESSURE [bar]	ACCEPTABLE OPERATING OVER-PRESSURE OF WATER TANK [bar]	MAXIMUM PRESSURE IN COLD WATER PIPES [bar]
6	6	to 4,8

Table 4

2.4 CONNECTION OF TANK TO HOT WATER DISTRIBUTION SYSTEM

The tank is placed on the ground, next to the heating source, or in its vicinity. The heating circuit shall be connected to marked tank exchanger inputs and outputs, and bleeder valve installed at the highest point. It is necessary to install a filter into the circuit in order to protect pumps, three-way valve, backflow flaps and the exchanger from sedimentation. It is recommended to flush the heating circuit before the assembly. All wiring connections must be properly insulated from heat. If the system works with priority heating of HUU using a three-way valve, always follow the installation instructions of the three-way valve's manufacturer.

An example of a group tank connection for steady hot water consumption from all tanks using Tichelmann's method

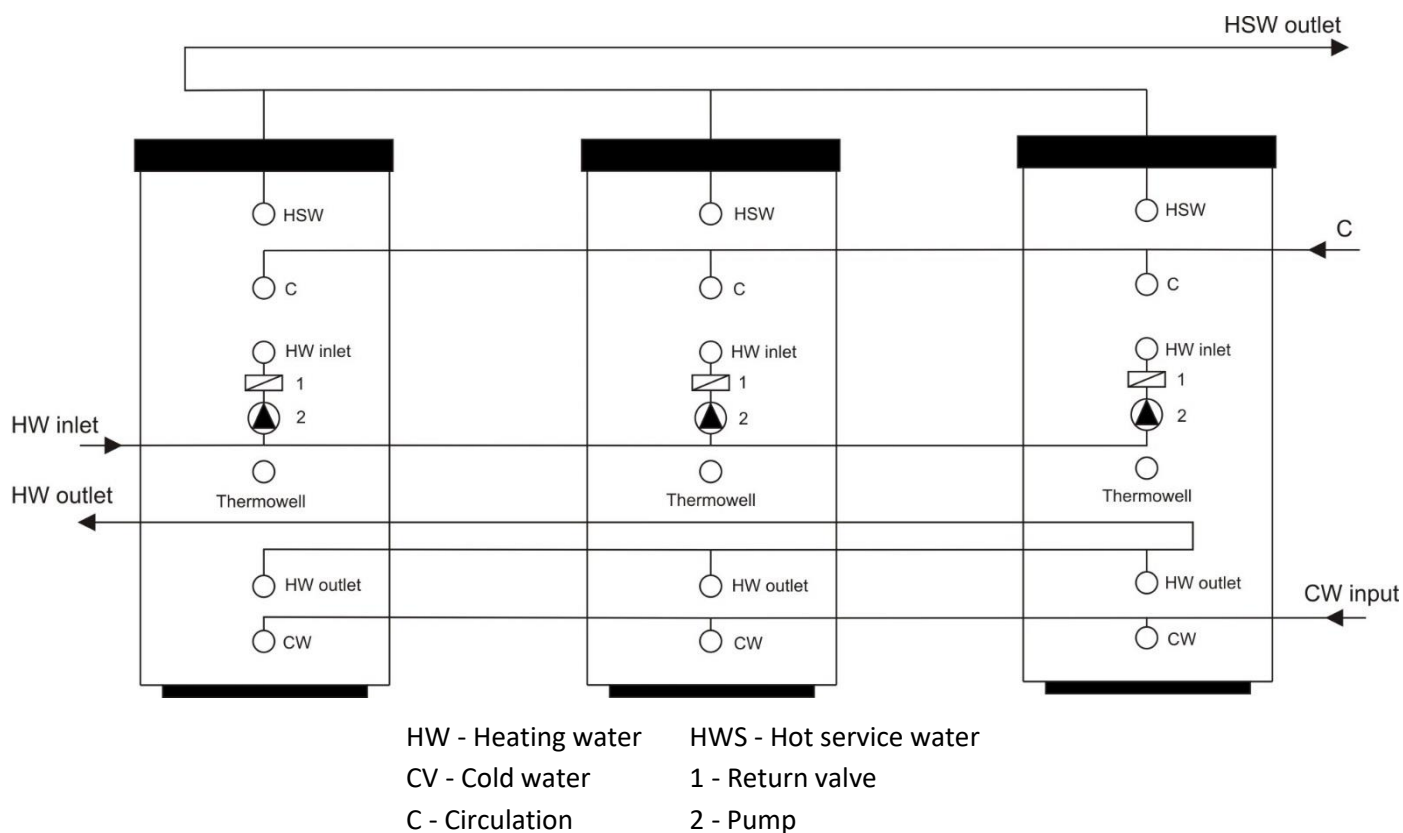


Figure 5

2.5 TANK CLEANING AND ANODE ROD EXCHANGE

Repetitive water heating causes limestone sediment on both the enamelled tank walls and chiefly the flange lid. Lime scale settling depends on hardness of heated water, its temperature and on the volume of hot water used.



We recommend checking and cleaning the receptacle from lime scale and eventual replacement of the anode rod after two years of operation.

The anode life is theoretically calculated for two years of operation; however, it changes with water hardness and chemical composition in the place of use. Based on such an inspection, the next term of anode rod exchange may be determined. Have a company in charge of service affairs deal with the cleaning and exchanging of the anode. When draining water from the tank, the combination faucet valve for hot water must be open, preventing the occurrence of under-pressure in the tank receptacle which would stop water from draining.



To prevent the occurrence of bacteria (e.g. Legionella pneumophila) within stack heating it is recommended, if absolutely necessary, to increase the temperature of hot service water (HSW) periodically for a transitional period of time to at least 70°C. It is also possible to make use of another way of disinfecting HSW.

PROCEDURE OF EXCHANGING ANODE ROD IN UPPER PART OF THE TANK

1. Turn off control voltage to the tank
2. Drain water from 1/5 tank.
PROCEDURE: Close water inlet in the tank
Open the hot water valve on the combination faucet.
Open the drain tap of the tank
3. Anode is screwed in under the plastic cover in the upper lid of the tank
4. Unscrew the anode using adequate wrench
5. Pull the anode out and follow reversed steps to install a new one
6. During the assembly, make sure the ground wire (300 l) is connected properly; it is essential for proper anode function
7. Fill the tank with water

PROCEDURE OF EXCHANGING ANODE ROD IN SIDE FLANGE

1. Turn off control voltage to the tank
2. Drain water from the tank.
PROCEDURE: Close water inlet in the tank
Open the hot water valve on the combination faucet.
Open the drain tap of the tank
3. One anode is screwed in under the plastic cover in the upper lid of the tank, and the other one is screwed in on the side flange
4. Unscrew the anode using adequate wrench
5. Pull the anode out and follow reversed steps to install a new one
6. Fill the tank with water

2.6 SPARE PARTS

-magnesium anode

When ordering spare parts always state the name of the part, the type and type number from the tank's plate.

3 IMPORTANT NOTICES

The products have metal parts, some of which contain lead (CAS Nr. 7439-92-1) in concentrations exceeding 0.1 % by weight, or thermostats with hydrogenated terphenyl (CAS Nr. 61788-32-7) in concentrations exceeding 0.1 % by weight. These are substances which can have a very serious impact on human health and the environment. If these products are used in the prescribed manner (according to the operating instructions), and are serviced and maintained in accordance with the technical instructions and standard servicing procedures, they pose no risk to human health and the environment. Obsolete or discarded products do not belong in municipal waste. Passing them on to specialized companies licensed to accept waste or, in the case of electrical equipment, to collection points, ensures that they are processed, used and professionally disposed of in accordance with the applicable regulations, thus eliminating any risk to the environment and human health.

3.1 IMPORTANT NOTICES



Without a proof issued by a professional company about performed electrical and plumbing fixture the warranty shall be void.

It is necessary to check the protective magnesium anode periodically and replace it if necessary.

No closing armature may be mounted between the tank and the safety valve.

All outlets of hot water must be equipped with combination faucets.

Prior to the first filling the tank with water we recommend that the receptacle's flange connection nuts are tightened.

3.2 INSTALLATION REGULATIONS



Both the electric and water installation must follow and meet the requirements and regulations relevant in the country of use!

3.3 DISPOSAL OF PACKAGING MATERIAL AND NON-FUNCTIONING PRODUCT

A service fee for providing return and recovery of packaging material has been paid for the packaging in which the product was delivered. The service fee was paid pursuant to Act No. 477/2001 Coll., as amended, at EKO-KOM a.s. The client number of the company is F06020274. Take the water tank packages to a waste disposal place determined by the municipality. Disassemble the discarded and unserviceable product after the operation terminates, and transport it to a waste recycling centre (collecting yard), or contact the manufacturer.



12-5-2021